

# ADDENDUM TO THE REPAIR PARTS LIST FOR DUNKIRK PWB/PVWB BOILERS

## Repair Parts


### GAS – FIRED HOT WATER BOILERS

– IMPORTANT –  
READ THESE INSTRUCTIONS BEFORE ORDERING

All parts are listed in the following Parts List may be ordered through your nearest supplier.

When ordering parts, first obtain the Model Number from the data plate on your boiler, than determine the Part No. (not the Key No.) and the Description of each part from the following illustrations and list. Be sure to give us all this information:

The Part No. – The Part Description – The Boiler Model No.

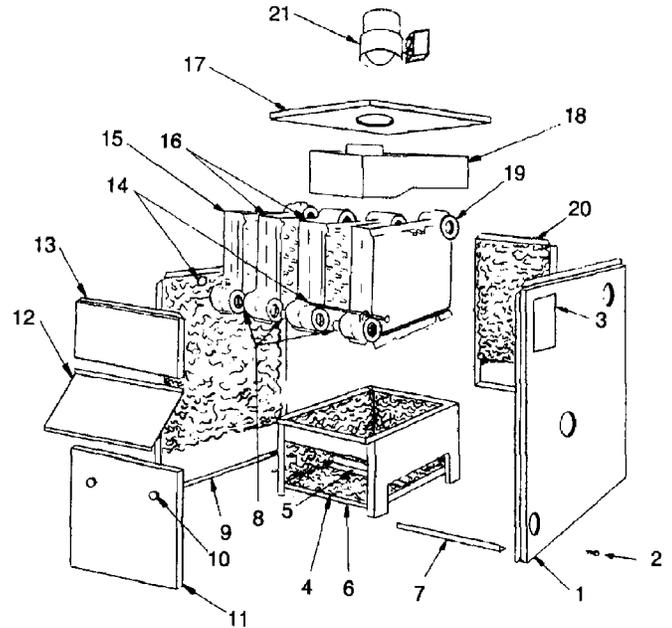

## JACKET - SECTION AND BASE PARTS


THIS IS A REPAIR PARTS LIST - NOT A PACKAGING LIST

KEY NO.	DESCRIPTION	2 SECTION	3 SECTION	4 SECTION	5 SECTION	6 SECTION	7 SECTION	8 SECTION	9 SECTION
		Part No.							
1	Jacket, Right Side Panel	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901
2	#10 x 1/2 Sheet Metal Screw	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074
3	Rating Plate	146-80-901	146-80-901	146-80-901	146-80-901	146-80-901	146-80-901	146-80-901	146-80-901
4	Base Insulation - Base Sides (2)	146-14-020	146-14-130	146-14-130	146-14-130	146-14-130	146-14-130	146-14-130	146-14-130
	- Base Front	146-14-112	146-14-113	146-14-114	146-14-115	146-14-116	146-14-117	146-14-118	146-14-119
	- Base Rear	146-14-122	146-14-123	146-14-124	146-14-125	146-14-126	146-14-127	146-14-128	146-14-129
5	Base Baffle	425-00-642	425-00-643	425-00-644	425-00-645	425-00-646	425-00-647	425-00-648	425-00-649
6	Base	425-00-662	425-00-663	425-00-664	425-00-665	425-00-666	425-00-667	425-00-668	425-00-669
7	Jacket Tie Bar	425-00-652	425-00-653	425-00-654	425-00-655	425-00-656	425-00-657	425-00-658	425-00-659
8	Push Nipple	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976
9	Jacket, Left Side Panel	425-45-900	425-45-900	425-45-900	425-45-900	425-45-900	425-45-900	425-45-900	425-45-900
10	Knob, Service Door (Pair)	137-02-513	137-02-513	137-02-513	137-02-513	137-02-513	137-02-513	137-02-513	137-02-513
11	Jacket, Service Door	425-00-912	425-00-913	425-00-914	425-00-915	425-00-916	425-00-917	425-00-918	425-00-919
12	Jacket, Int'd. Panel	425-00-812	425-00-813	425-00-814	425-00-815	425-00-816	425-00-817	425-00-818	425-00-819
13	Jacket, Front Panel	425-00-810	425-00-811	425-00-804	425-00-805	425-00-806	425-00-807	425-00-808	425-00-809
14	1/4" Tie Rod, Nut	146-05-008	146-05-001	146-05-002	146-05-051	146-05-053	146-05-005	146-05-007	146-05-009
15	Boiler Section, Left	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020
16	Boiler Section, Middle	----	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021
17	Jacket, Top Panel	425-45-842	425-45-843	425-45-844	425-45-845	425-45-846	425-45-847	425-45-848	425-45-849
18	Draft Diverter	425-00-672	425-00-673	425-00-674	425-00-675	425-00-676	425-00-677	425-00-678	425-00-679
19	Boiler Section, Right	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021
20	Jacket, Back Panel	425-00-902	425-00-903	425-00-904	425-00-905	425-00-906	425-00-907	425-00-908	425-00-909
‡	Jacket Complete	425-00-922	425-00-923	425-00-924	425-00-925	425-00-926	425-00-927	425-00-928	425-00-929
‡	Block Assembly (19, 16, 15, 14, 8)	410-00-213	410-00-313	410-00-413	410-00-513	410-00-613	410-00-713	410-00-813	410-00-913
‡	Combustible Floor Plate	146-14-031	146-14-031	146-14-031	146-14-031	146-14-031	146-14-032	146-14-032	146-14-032
‡	Cerafelt Gasket	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018
21	Vent Damper	118-20-04	118-20-05	118-20-06	118-20-06	118-20-07	118-20-07	118-20-07	118-20-07
‡	Base Assembly (6, 5, 4)	433-00-662	433-00-663	433-00-664	433-00-665	433-00-666	433-00-667	433-00-668	433-00-669

‡ Not illustrated

# Repair Parts

## BOILER CONTROLS AND PIPING

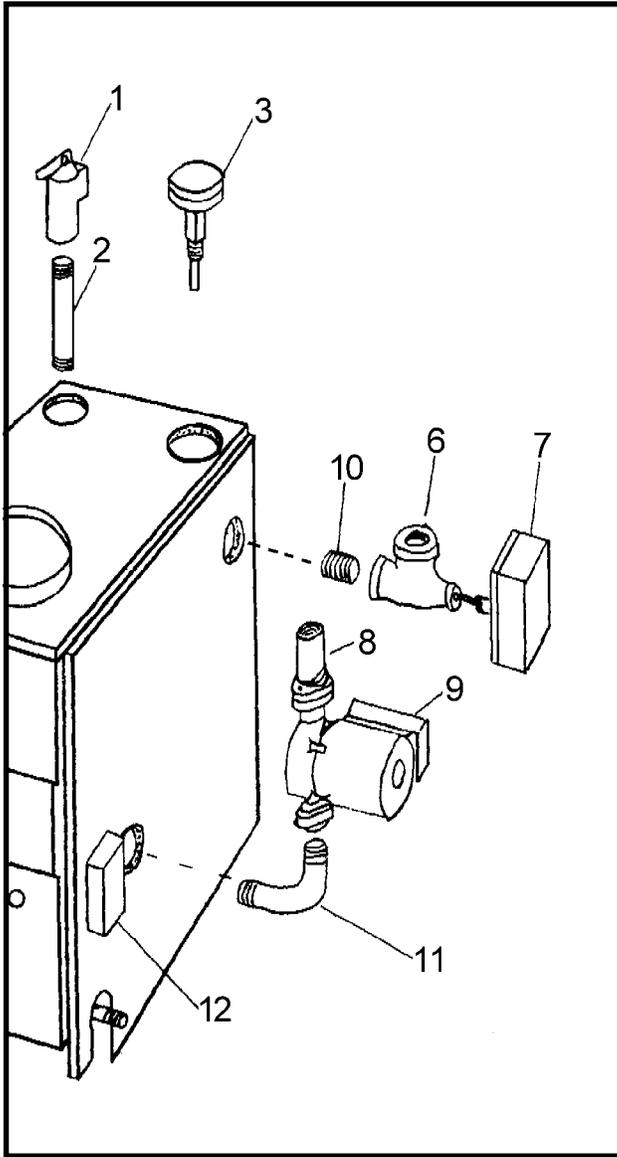

Key No.	Description	Part No.
1	3/4" ASME Relief Valve	146-22-011
2	3/4" x 7 1/2" Nipple	146-07-041
3	Temperature Pessure Gauge - 5" Stem	146-23-007
6	1 1/4" x 3/4" x 1 1/4" Tee	151-00-01
7	Aquastat Relay	101-00-02
8	Isolation Ball Valve	146-26-043
‡	Grundfos UP15-42F Circulator	CI-006.01
9	Taco 007 Circulator	CI-001.03
10	1 1/4" x 2 1/2" Nipple	146-07-044
11	1 1/4" Bent Return Nipple	146-07-003
12	Intermittent Pilot Control	146-62-070
‡	Spill Switch (36TX16-6281) 340° F	146-60-002
‡	Rollout Switch	146-29-002
‡	4" Vent Damper (w 3" Adapter)	118-20-04
‡	5" Vent Damper	118-20-05
‡	6" Vent Damper	118-20-06
‡	7" Vent Damper	118-20-07
‡	Vent Damper Operator (Motor)	114-00-02
‡	400° F Black Silicone Rubber Adhesive Sealant (10.3 oz. Cartridge)	146-06-020

‡ Not illustrated