MGB/15B/DV - Q345 Spark Pilot Retrofit MGB/15B - Q314 Standing Pilot Retrofit INSTALLATION INSTRUCTIONS

▲ WARNING

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this instruction and understand all requirements, including requirements of authority having jurisdiction, before beginning installation. Installation not complete until appliance operation is verified per Installation, Operation & Maintenance Manual provided with boiler.

Following instructions assist a service technician in the installation of Q345 Spark Pilot Retrofit Kit for MGB/15B/DV or Q314 Standing Pilot Retrofit Kit for MGB/15B.

1. Follow instructions to TURN OFF GAS TO APPLIANCE found on Operating Instructions label on boiler or in Installation, Operation & Maintenance Manual. Verify all electrical power to boiler is turned off.

▲ WARNING

Electrical shock hazard. Turn OFF electrical power supply at service panel.

2. Allow boiler to cool for 30 minutes before starting installation.

▲ WARNING

Burn hazard. Verify heat exchanger and igniter have cooled or use appropriate personal protection equipment before removing pilot.

- 3. Remove front boiler door.
- **4.** Disconnect spark cables from control board or disconnect thermocouple from gas valve.
- **5.** Loosen compression fitting located on top of gas valve. Disconnect pilot tube from gas valve.
- **6.** Locate current pilot assembly in front of base. See Figure 1.
- **7.** Remove top burner door and burner tubes. See Figure 1.
- **8.** Remove two pilot mounting screws holding pilot assembly in place. Remove entire pilot assembly and discard.
- **9. This step is for MGB50 and 15B045 only.** Locate supplied pilot assembly. Bend pilot tubing (tight 180°, then 90° back) in order to get it in between the upper and lower burner doors. See figure 2.

A WARNING

Fire, burn hazard. Do not operate boiler without burner doors in place. Failure to follow these instructions could result in death or serious injury.

Kit Description	Part Number
Standing Pilot Natural Gas Pilot Retrofit	550001926
Standing Pilot LP (Propane) Gas Pilot Retrofit	550001927
Intermittent Pilot (Spark) Natural Gas Pilot Retrofit	550003039
Intermittent Pilot (Spark) LP Gas Pilot Retrofit	550003040

Kit Contents			
Natural Gas Kit Includes	LP Kit Includes	Qty	
Natural Gas spark/ standing pilot assembly	LP spark/standing pilot assembly	1	
Pilot Assembly Mounting Screws	Pilot Assembly Mounting Screws	2	
Gas Valve Compression Fitting	Gas Valve Compression Fitting	1	


Burner Door

Lower Front Panel

Burner Tubes

Figure 1 - Base Front (3 Section Shown)

Figure 2 - Bend Pilot Tubing (Side Shield Not Shown for Clarity)

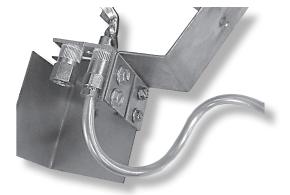

KIT INSTALLATION INSTRUCTIONS

NOTE: Refer to **Figure 6** final pilot tubing configuration.

- **10.** Spin assembly so it enters base between lower front panel and top of base. See Figure 3.
- **11.** Push assembly into base. If needed, slide pilot tube and spark wire or thermcouple wire through hole in lower front panel. See Figure 4.
- **12.** Rotate pilot assembly until it is vertical and holes in pilot bracket assembly line up with pilot mounting holes in top of base. Verify base insulation is over top of pilot bracket, not in between bracket and base top. See Figure 5.
- **13.** Fasten assembly using screws provided. After fastening assembly, reach in base above bracket and **verify insulation is laying flat against base front**.
- **14.** Verify pilot assembly is correctly angled; at right angle with top of base.
- **15.** Attach compression fitting to tube connection on gas valve. Insert tubing and tighten until ferrule is gas tight. If applicable attach thermocouple.
- **16.** Install burner tubes in base by sliding crimped end into slots in back of base. Rest front of burner on orifices. Replace upper burner door. See Figure 5.
- **17.** Final pilot tubing configuration after completion of all steps see Figure 6.
- **18.** It may be necessary to adjust the pilot sleeve at the base of the pilot to protect spark and sensor wiring from excess heat.
- **19.** Refer to Installation, Operation and Maintenance Manual and labels affixed to boiler for lighting instructions.

Figure 6 - MGB50 /15B045 Final Pilot Tubing Configuration

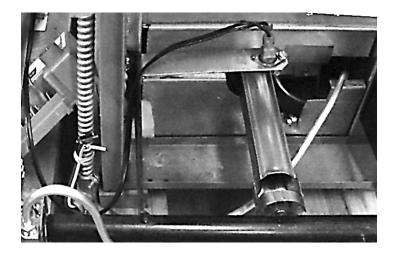


Figure 3 - Install Pilot Assembly

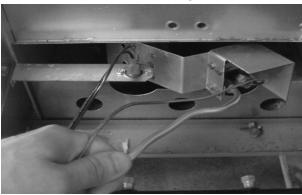


Figure 4 - Installed Pilot Assembly (3 Section Shown)

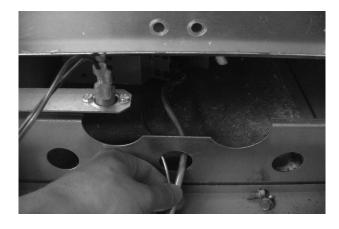


Figure 5 - Install Burner Door and Tubes (3 Section Shown)

