
IMPORTANT: THIS MANUAL MUST BE KEPT NEAR THE FURNACE FOR FUTURE REFERENCE!!


freewatt_®

FW95V

NATURAL AND PROPANE GAS TWO STAGE HIGH EFFICIENCY (CONDENSING) WARM AIR FURNACE

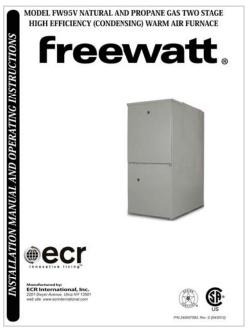

Installation, Operation & Maintenance Manual 240007583 REV D [04/2012]

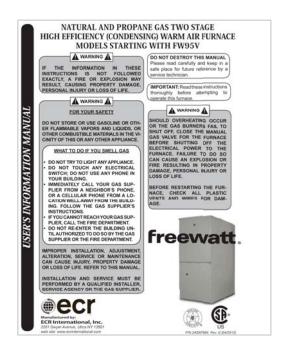

User's Information Manual 240007584 REV D 04/2012]