IMPORTANT: THIS MANUAL MUST BE KEPT NEAR THE FURNACE FOR FUTURE REFERENCE!!




Oil Fired Warm Air Furnaces

HTL-D (Up-Flow Model)
HTLV-D (Up-Flow Model with ECM)



Installation, Operation & Maintenance Manual 240007799 REV E [11/2014]

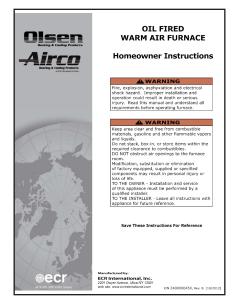


User's Information Manual 240006450 REV B [10/2012]



Limited Warranty 240005038 REV C



 Warranty Registration 1595023 REV B



240007762