


WIRING DIAGRAM 50/75/100

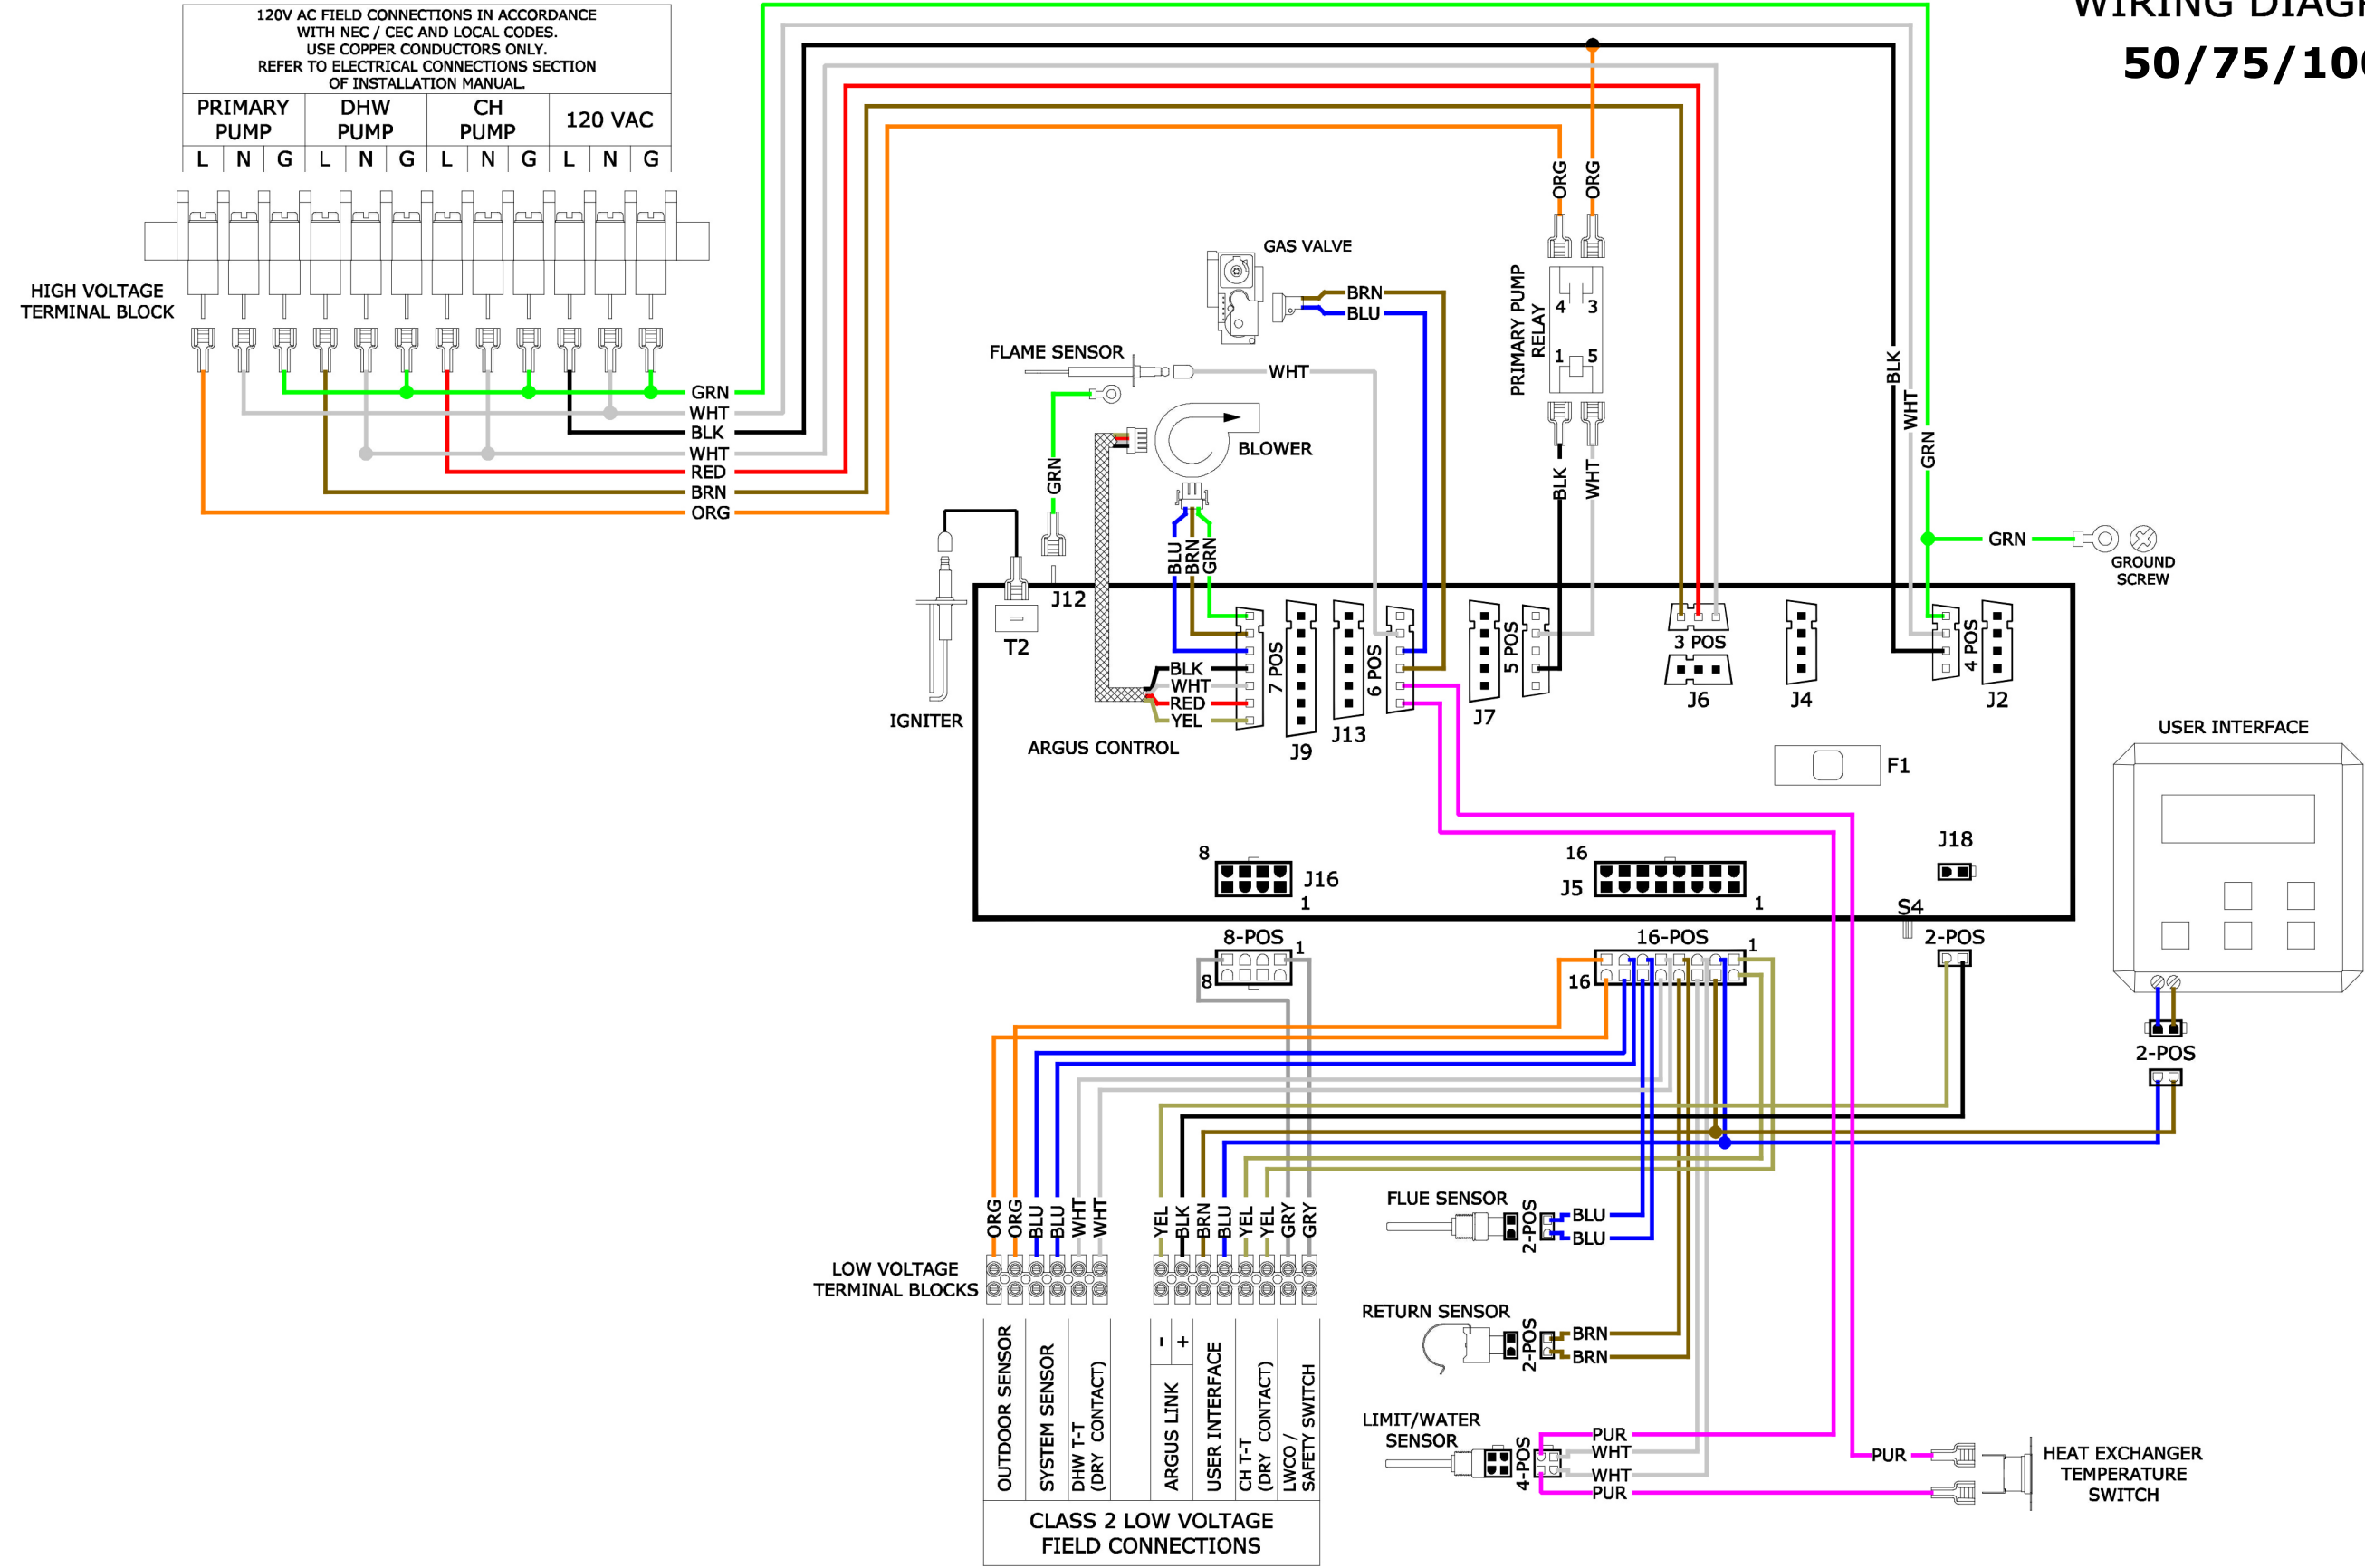

120V AC FIELD CONNECTIONS IN ACCORDANCE WITH NEC / CEC AND LOCAL CODES. USE COPPER CONDUCTORS ONLY. REFER TO ELECTRICAL CONNECTIONS SECTION OF INSTALLATION MANUAL.

PRIMARY PUMP			DHW PUMP			CH PUMP			120 VAC		
L	N	G	L	N	G	L	N	G	L	N	G
GRN	WHT	BLK	WHT	BLK	GRN	RED	WHT	BLK	ORG	WHT	GRN

CLASS 2 LOW VOLTAGE FIELD CONNECTIONS

LADDER DIAGRAM 50/75/100

