

NOTICE

This notice applies only to BCL/BFL furnaces equipped with **fan and limit controls**. It *does not* apply to furnaces equipped with electronic fan timer controls.


Furnace may be equipped with Honeywell L4064 or White Rodgers 5D51 fan and limit control. Wiring diagrams in Installation, Operation and Maintenance Manual show the correct wiring connections to the furnace, which are the same for both controls. **Locations of terminals within the control are different for each control.**

Honeywell control as shown on wiring diagram in IOM, fan switch is on the left and limit switch is on the right.


White Rodgers Control limit switch is on the left, fan switch is on the right.

Follow all codes, standards and safety requirements as listed in the Installation, Operation and Maintenance Manual received with this furnace.

HONEYWELL L4064

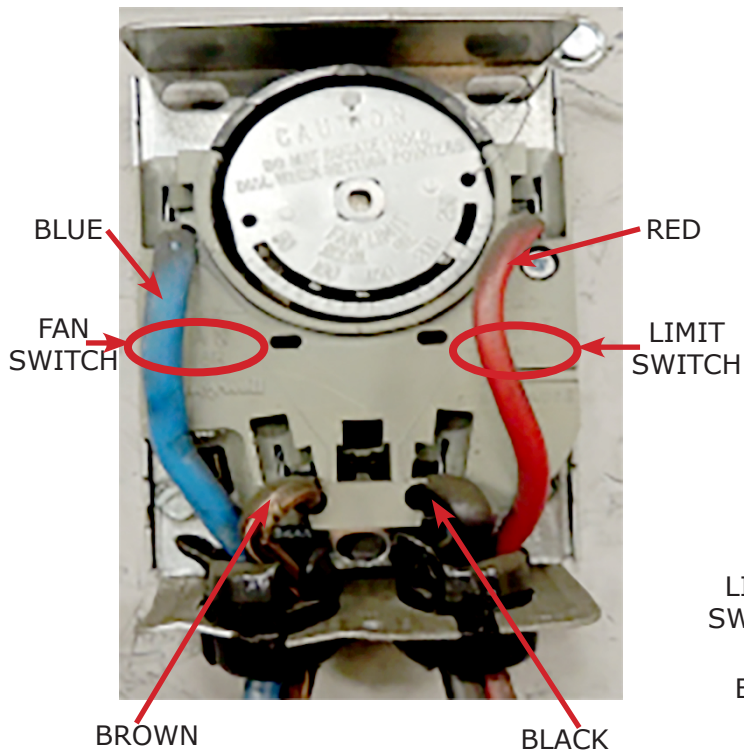

WHITE RODGERS 5D51

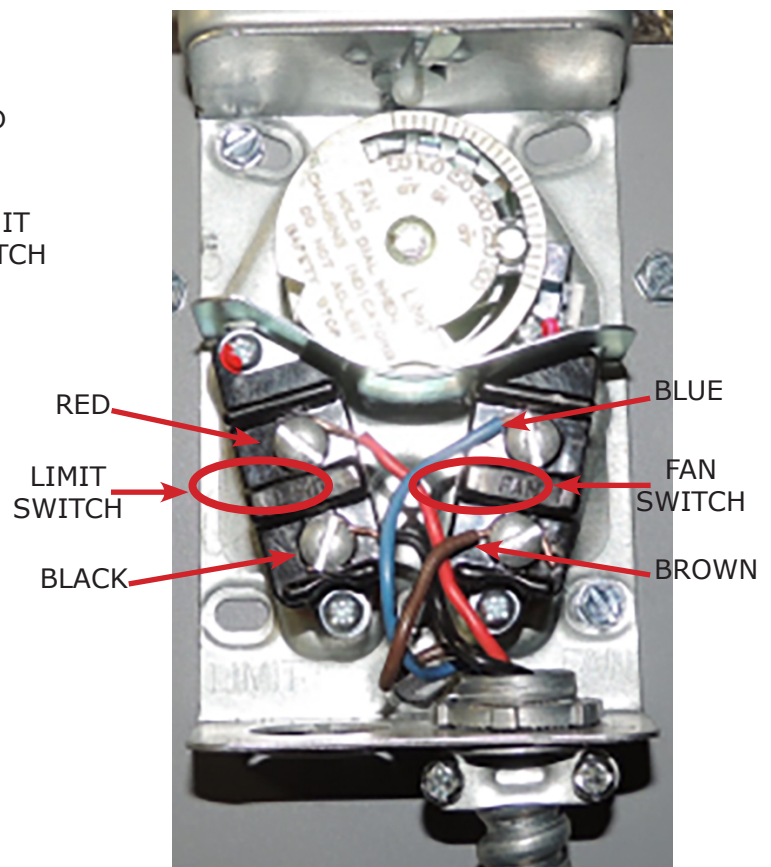

2201 Dwyer Avenue, Utica, NY 13501
Tel. 800 253 7900
www.ecrinternational.com

All specifications subject to change without notice.
©2018 ECR International, Inc.
PN 240011918 REV. B [03/15/2018]