IMPORTANT: THIS MANUAL MUST BE KEPT NEAR THE FURNACE FOR FUTURE REFERENCE!!




Oil Fired Warm Air Furnaces

BCL BCL-S BFL DIRECT VENT MODELS



Installation, Operation & Maintenance Manual 28141 REV H [03/2014]



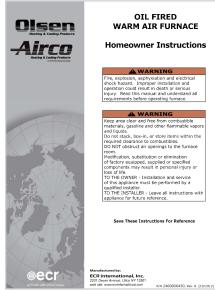

User's Information Manual 240006450 REV B [10/2012]



Warranty Registration 1595023 REV B

Direct Vent
Oil Fired Warm Air Furnaces

INSTALLATION, OPERATION & MAINTENANCE MANUAL

Fire, explosion, asphyviation and electrical shock hazard. Improper installation could result in death or serious injury, Read this manual and understand all requirements before beginning installation.

NOTICE:
Information contained in this manual pertains to oil fired direct with tumes expulped with manufacturer installed blocked vert safety control system (pressure switch).

ALL INSTALLATIONS MIST MET ALL LOCAL, PROVINCIAL/STATE, AND FEDERAL CODES WHICH HAYD DIFFER FROM THIS MANUAL

**ECRI INSTALLATIONS MIST MET ALL LOCAL, PROVINCIAL/STATE, AND FEDERAL CODES WHICH HAYD DIFFER FROM THIS MANUAL

**ECRI INSTALLATIONS MIST MET ALL LOCAL, PROVINCIAL/STATE, AND FEDERAL CODES WHICH HAYD DIFFER FROM THIS MANUAL

**ECRI INSTALLATIONS MIST MET ALL LOCAL, PROVINCIAL/STATE, AND FEDERAL CODES WHICH HAYD DIFFER FROM THIS MANUAL

Direct Vent Oil Fired Furnaces Installation, Operation, Maintenance Manual 240006979 REV I [04/2015]

Limited Warranty 240005038 REV C



26625DV