


Instructions

For Affixing Boiler Logo

PN 3002209

1. Peel protective paper backing off logo.
2. Locate boiler logo on front of boiler above control as shown below.
3. Logo should align with curvature of control bezel.

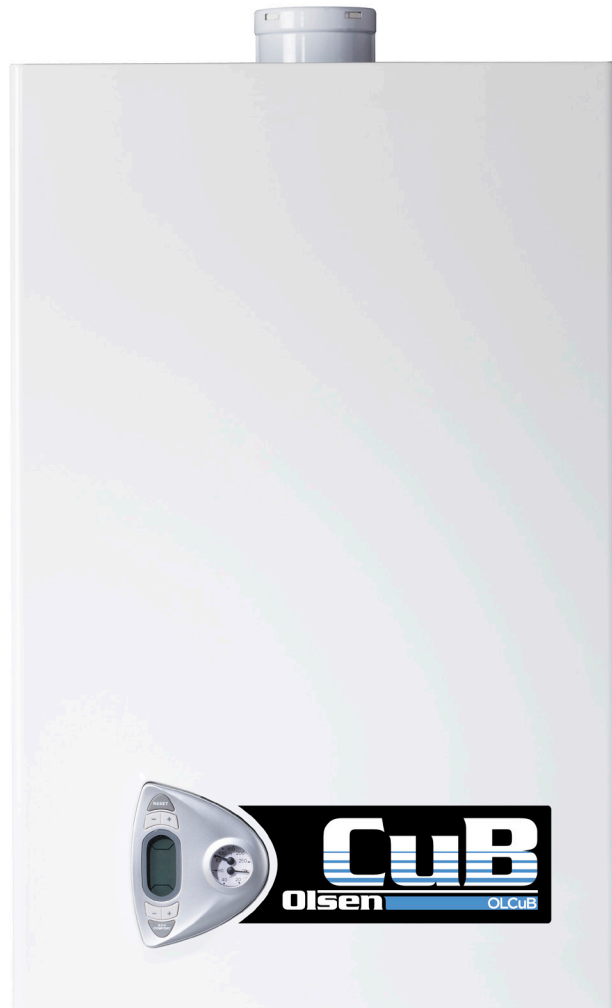

ECR international
EST. 1928
A Family of Heating & Cooling Brands.

ECR International, Inc.
2201 Dwyer Avenue, Utica NY 13501
web site: www.ecrinternational.com