
IMPORTANT: THIS MANUAL MUST BE KEPT NEAR THE FURNACE FOR FUTURE REFERENCE!!



Oil Fired Warm Air Furnaces UML (Up-Flow Model)

Olsen	
UML (Up-Flow Model)	
Oil Fired Warm Air Furnaces	
INSTALLATION, OPERATION & MAINTENANCE MANUAL	
⊜ecr	ECR International 2210 Dayer Avenue, Ulica NY 13501 web site: www.ecrinternational.com
An ISO 9001-2008 Certified Company	P/N 240010817, Rev. A [09/2014]

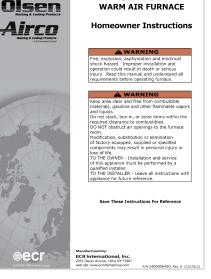

OTL FTRED

WARM AIR FURNACE

User's Information Manual 240006450 REV B [10/2012]

Installation, Operation & Maintenance Manual 240010817 REV A [09/2014]



Limited Warranty 240005038 REV C



Warranty Registration 1595023 REV B



Envelope Assy Master 3002234 REV A [09/2014]