


# Instructions

## For Affixing Boiler Logo

### Kit 3002381

1. Peel protective paper backing off logo.
2. Locate boiler logo on front of boiler above control as shown below.
3. Logo should align with curvature of control bezel.

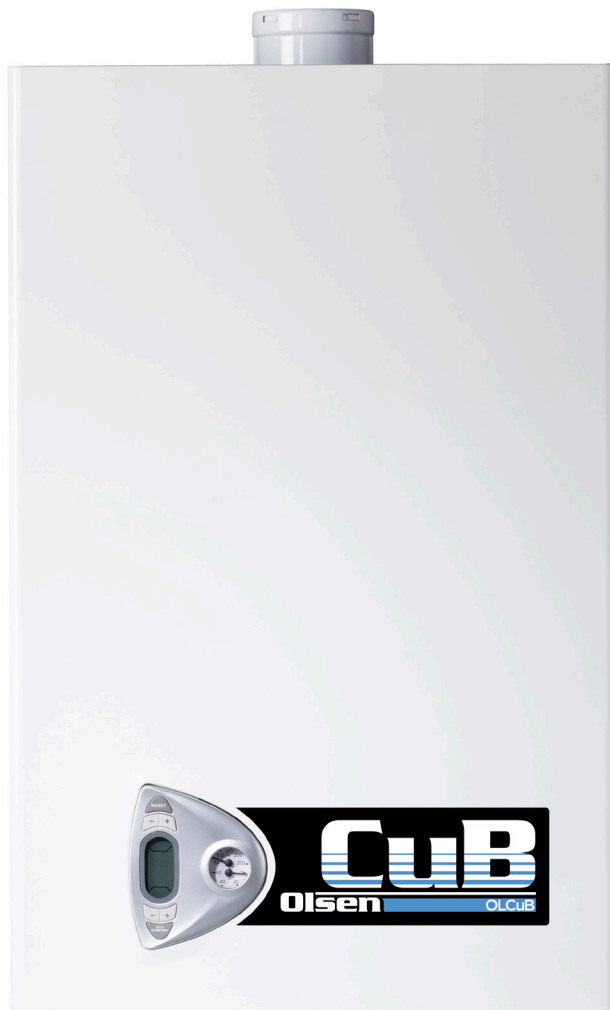

**ECR international**  
EST. 1928  
A Family of Heating & Cooling Brands.

**ECR International, Inc.**  
2201 Dwyer Avenue, Utica NY 13501  
web site: [www.ecrinternational.com](http://www.ecrinternational.com)