IMPORTANT: THIS MANUAL MUST BE KEPT NEAR THE FURNACE FOR FUTURE REFERENCE!!



Oil Fired Warm Air Furnaces


WML-C AND MPL-B (Down-Flow or Horizontal Model) WMLV-C (Down-Flow or Horizontal Model with ECM)




Installation, Operation & Maintenance Manual 30318 REV F [04/2015]



Direct Vent Oil Fired Furnaces Installation, Operation, Maintenance Manual 240006979 REV I [04/2015]

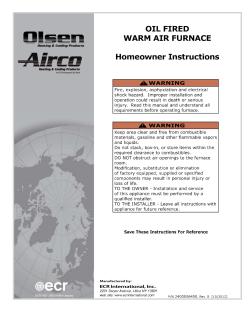

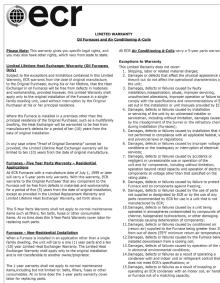



Warranty Registration 1595023 REV B

User's Information Manual Limited Warranty 240005038 REV C 240006450 REV B [10/2012] [09/2014]



30317DV