# RETROAIRE\*\*

# The Right Fit for Comfort

### **Instructions for VPRC/VPRH 18 Transition Wall Sleeve Kit**

Kit installation shall be completed by qualified agency.

#### **WARNING**

Electrical shock hazard. Turn OFF electrical power supply at service panel. Failure to follow these instructions could result in death or serious injury.

#### **A** CAUTION

Parts have sharp edges. Use proper personal protection equipment. Failure to follow these instructions could result in minor or moderate injury.

#### **Required Tools for Assembly:**

- Drill with 1/4" hex head driver or wrench.
- Silicone suitable for outdoor use
- Wrench for eight (8) 1/4 -20 nuts.

Kit Contents	
Description	QTY
½"x ½" Open Foam Tape	8.4 ft
Screws #8 x 1/4"	6
Washers 7/8" x 1/4"	8
Nuts 1/4-20	8
Transition Wall Sleeve	1

Use this kit when replacing VPAC/VPHP 15 unit with VPRC/VPRH18.


#### NOTICE

Increase platform height 3/4" [19.05 mm]. Failure to follow these instructions will result in water damage to the interior of the building. Duct work modifications will be necessary for proper fit.

Installation Instructions:

- 1. Follow all safety guidelines.
- 2. Disconnect electrical power to existing unit.
- **3.** Remove existing unit from wall sleeve.
- **4.** Examine existing wall sleeve for damage, rust or corrosion. Replace if necessary.
- 5. Replace old foam tape with supplied 8.4 ft ½" x ½" open foam tape. See Figure 1.

Figure 1 - Existing Wall Sleeve Existing Wal Sleeve

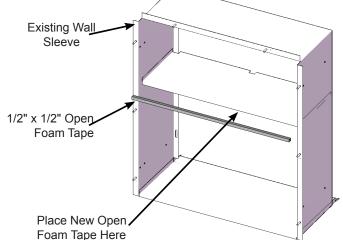




ECR International, Inc.

2201 Dwyer Avenue • Utica, New York 13501 Ph: 800.228.9364 • Web: retroaire.com

## Instructions for VPRC/VPRH 18 Transition Wall Sleeve Kit

- **6.** Use six (6) screws #8 x ¼" to assemble transition kit. See Figure 2.
- **8.** Apply ¼" bead of silicone between existing wall sleeve and transition kit. See Figure 4.

Figure 2 - Transition Wall Sleeve

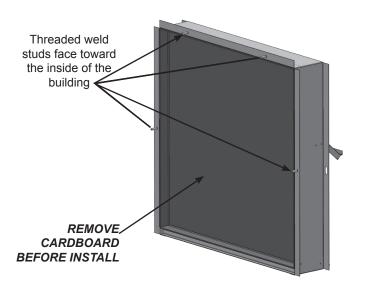

**7.** Install transition kit onto the existing wall sleeve using four (4) washers and nuts supplied with kit. See Figure 3.

Figure 3 - Transition Kit Installed Onto Existing Wall Sleeve

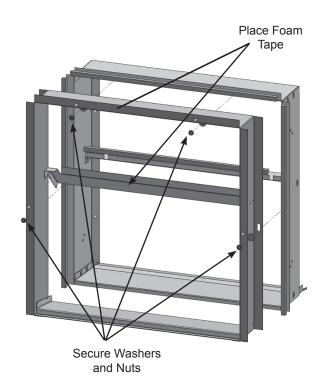


Figure 4 - Place Silicone


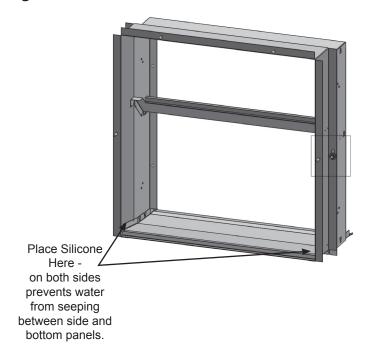


Figure 5 - Transition Piece In Place

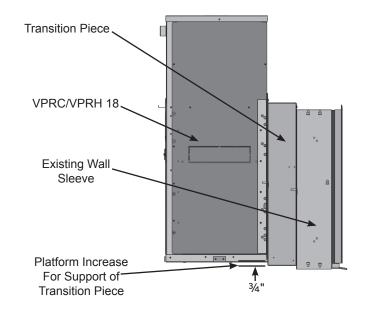

#### NOTICE

Increase platform height  $\frac{3}{4}$ " [19.05 mm]. Failure to follow these instructions will result in water damage to the interior of the building. Duct work modifications will be necessary for proper fit.